

dBKlima

Installation guide



1 Install edge insulation strip



2 Install angle & door profiles




3 Lay insulation panel



4 Interlocking panels



5 Lay the pipe

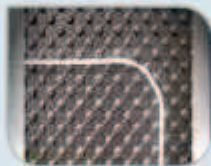


6 Expansion joint profile



7 Let pipe pass through the wall



8 Circuit installed

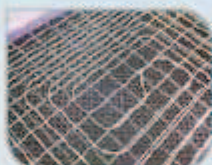

9 Lay anti-shrinkage mesh



10 Fit the pipe to the manifold



11 Pipe connected to the manifold



12 System installed



13 Use flanking strip to isolate the acoustic floor from the wall and skirting board

Topklima

Installation Guide



1 Install edge insulation strip



2 Lay insulation panel



3 Interlocking panels



4 Lay the pipe



5 Position exp. joint profile



6 Let pipe pass through the wall



7 Circuit installed



8 Lay anti-shrinkage mesh



9 Fit the pipe to the manifold



11 Insert the pipe into the fitting



12 Pipe connected

Pentaklima

Installation Guide




1 Install edge insulation strip



2 Lay insulation panel




3 Interlocking panels

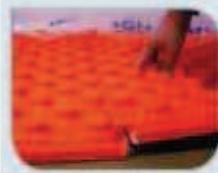

4 Lay the pipe



5 Position exp. joint profile

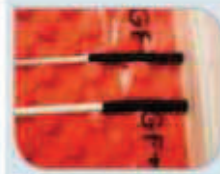

7 Circuit installed



8 Lay anti-shrinkage mesh



9 Fit the pipe to the manifold



11 Insert the pipe into the fitting



12 Pipe connected

Eptaklima


Installation guide



1 Install edge insulation strip



2 Lay insulation panel

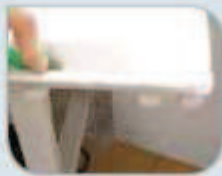

3 Interlocking panels



4 Lay the pipe



5 Position exp. joint profile



6 Let pipe pass through the wall




7 Circuit installed



8 Lay anti-shrinkage mesh



9 Fit the pipe to the manifold

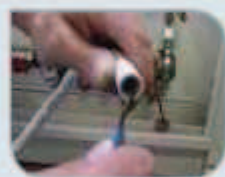

10 Insert the pipe into the fitting



11 Pipe connected

Dryklima

Installation guide



1 Install edge insulation strip



2 Cut the insulation board



3 Glue pre-grooved foil faced insulation board and insulation board with aluminized PS film together



4 Lay insulation panel



5 Passage way/ edge zone



6 Lay the pipe



7 Lay steel sheets



8 Fit the pipe to the manifold



9 Insert the pipe into the fitting



10 Pipe connected

GF Piping Systems → worldwide

Our sales companies and representatives ensure local customer support in over 100 countries.

www.piping.georgfischer.com



The technical data are not binding and not expressly warranted characteristics of the goods. They are subject to change. Our General Conditions of Sale apply.

Australia

George Fischer Pty Ltd
Kingsgrove NSW 2008
Phone +61(0)2/95 54 39 77
sales@georgfischer.com.au
www.georgfischer.com.au

Austria

Georg Fischer
Rohrleitungssysteme GmbH
3130 Herzogenburg
Phone +43(0)2782/856 43-0
office@georgfischer.at
www.georgfischer.at

Belgium/Luxembourg

Georg Fischer NV/SA
1070 Bruxelles/Brüssel
Phone +32(0)2/556 40 20
info.be@be.piping.georgfischer.com
www.georgfischer.be

Brazil

George Fischer Ltda
04795-100 São Paulo
Phone +55(0)11/5687 1311

China

Georg Fischer Piping Systems Ltd Shanghai
Pudong, Shanghai 201319
Phone +86(0)21/58 13 33 33
info@cn.piping.georgfischer.com
www.cn.piping.georgfischer.com

Denmark/Iceland

Georg Fischer A/S
2630 Taastrup
Phone +45 (0)70 22 19 75
info@dk.piping.georgfischer.com
www.georgfischer.dk

France

Georg Fischer S.A.S.
93208 Saint-Denis Cedex 1
Phone +33(0)1/492 21 34 1
info@georgfischer.fr
www.georgfischer.fr

Germany

Georg Fischer GmbH
73095 Albershausen
Phone +49(0)7161/302-0
info@georgfischer.de
www.rls.georgfischer.de

Georg Fischer DEKA GmbH

35232 Dautphetal-Mornshausen
Phone +49(0)6468/915-0
info@dekapipe.de
www.dekapipe.de

Greece

Georg Fischer S.p.A.
10434 Athens
Phone +30(0)1/882 04 91
office@piping-georgfischer.gr

India

Georg Fischer Piping Systems Ltd
400 093 Mumbai
Phone +91(0)22/2820 2362
branchoffice@georgfischer.net

Italy

Georg Fischer S.p.A.
20063 Cernusco S/N (MI)
Phone +3902/921 861
office@piping.georgfischer.it
www.georgfischer.it

Japan

Georg Fischer Ltd
556-0011 Osaka,
Phone +81(0)6/6635 2691
info@georgfischer.jp
www.georgfischer.jp

Malaysia

Georg Fischer (M) Sdn. Bhd.
47500 Subang Jaya
Phone +60 (0)3-8024 7879
conne.kong@georgfischer.com.my

Netherlands

Georg Fischer N.V.
8161 PA Epe
Phone +31(0)578/678 222
info.vgnl@nl.piping.georgfischer.com
www.georgfischer.nl

Norway

Georg Fischer AS
1351 Rud
Phone +47(0)67 18 29 00
info@no.piping.georgfischer.com
www.georgfischer.no

Poland

Georg Fischer Sp. z o.o.
02-226 Warszawa
Phone +48(0)22/313 10 50
www.georgfischer.pl

Romania

Georg Fischer
Rohrleitungssysteme AG
70000 Bucharest - Sector 1
Phone +40(0)1/222 91 36
office@georgfischer.ro

Singapore

George Fischer Pte Ltd
417 845 Singapore
Phone +65(0)67 47 06 11
info@georgfischer.com.sg
www.georgfischer.com.sg

Spain/Portugal

Georg Fischer S.A.
28009 Madrid
Phone +34(0)91/781 98 90
info@georgfischer.es
www.georgfischer.es

Sweden/Finland

Georg Fischer AB
12523 Älvsjö-Stockholm
Phone +46(0)8/506 775 00
info@georgfischer.se
www.georgfischer.se

Switzerland

Georg Fischer Rohrleitungssysteme (Schweiz) AG
8201 Schaffhausen
Phone +41(0)52 631 30 26
info@rohrleitungssysteme.georgfischer.ch
www.piping.georgfischer.ch

United Kingdom/Ireland

Georg Fischer Sales Limited
Coventry, CV2 2ST
Phone +44(0)2476 535 535
info@georgfischer.co.uk
www.georgfischer.co.uk

USA/Canada/Latin America/Carribbean

Georg Fischer Inc.
Tustin, CA 92780-7258
Phone +1(714) 731 88 00, Toll Free 800/854 40 90
info@us.piping.georgfischer.com
www.us.piping.georgfischer.com

Export

Georg Fischer Rohrleitungssysteme (Schweiz) AG
8201 Schaffhausen
Phone +41(0)52 631 11 11
export@piping.georgfischer.com
www.piping.georgfischer.com